



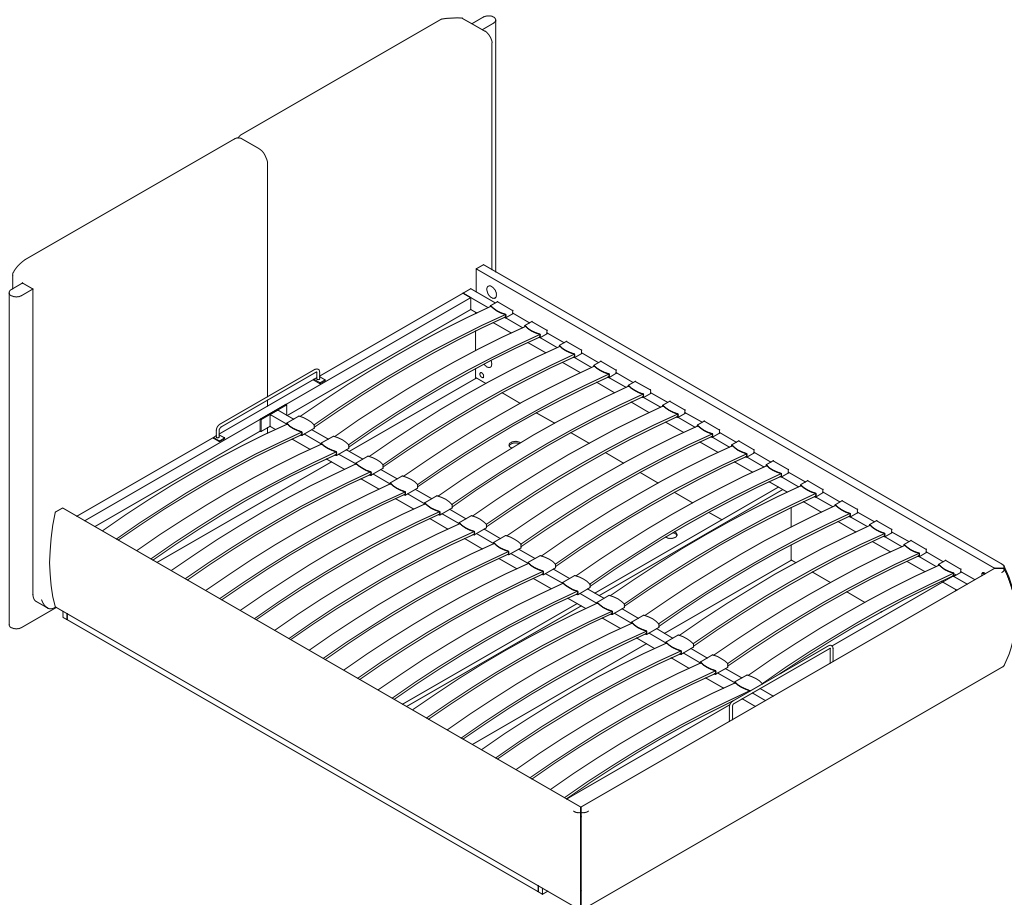


CPM7055-05




EAC

CPM7055-05

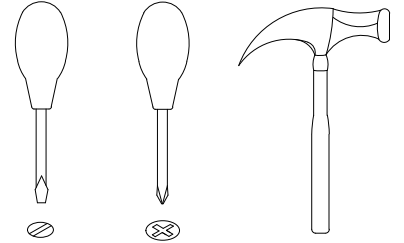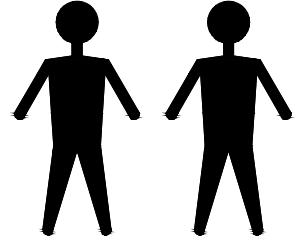

A x12
Spec: $\phi 8 \times L30$



B x12
Spec: $\phi 7 \times L30$



C x12
Spec: $\phi 15 \times H12$




D x4
Spec: $M8 \times L95$




E x4
Spec:



F x4
Spec: M8



G x8
Spec: $\phi 3.8 \times L25$



H x4
Spec: $\phi 10 \times L40$




I x12
Spec: $M6 \times L30$



J x12
Spec: $\phi 8 \times \phi 14$



L x4
Spec: $\phi 38$



M x1
Spec: 14#



N x1
Spec: 4#




O x8
Spec: $M6 \times L50$



P x4
Spec: M6



Q x4
Spec: $\phi 6 \times \phi 18$




R x1
Spec: 10mm




S x8
Spec: $\phi 6 \times L15$



T x8
Spec: $\phi 6 \times L15$




U x4
Spec: $M6 \times L55$




V x6
Spec: $M6 \times L50$




W x10
Spec: M6

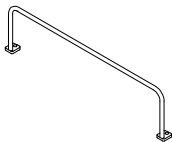

X x1
Spec: L410mm



Y x1
Spec: L410mm

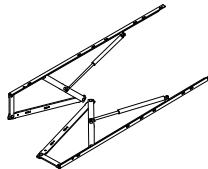


Z x1
Spec: L1220mm




A1 x12
Spec: 5/16*25



B1 x12
Spec: $\phi 18 \times \phi 8$

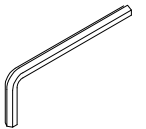



C1 x1
Spec: 5#

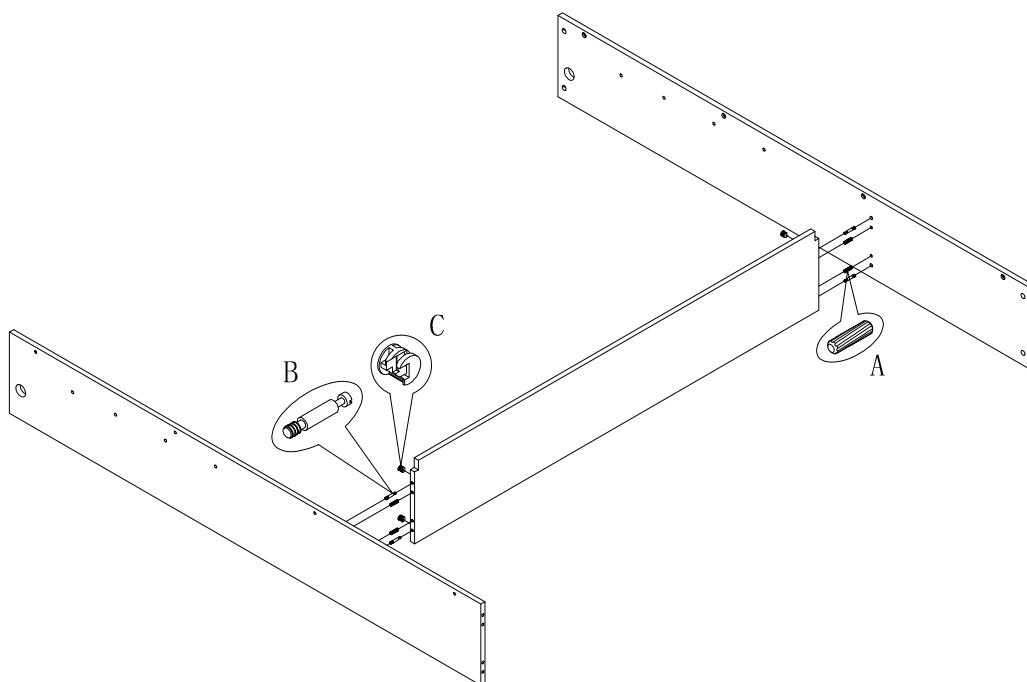

1


2

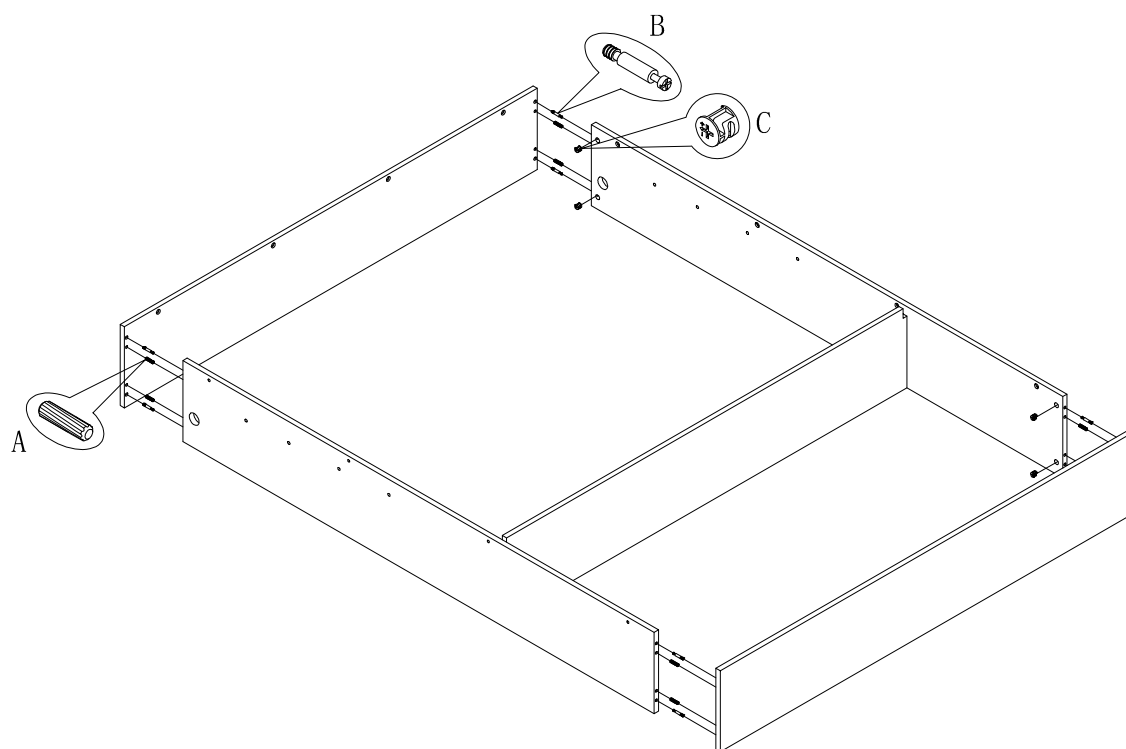


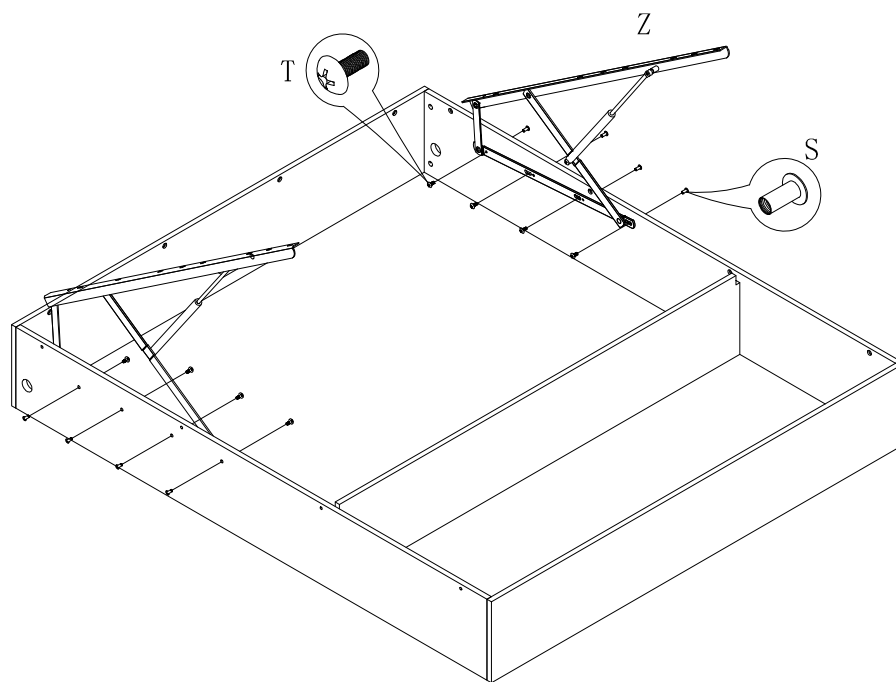

3


4

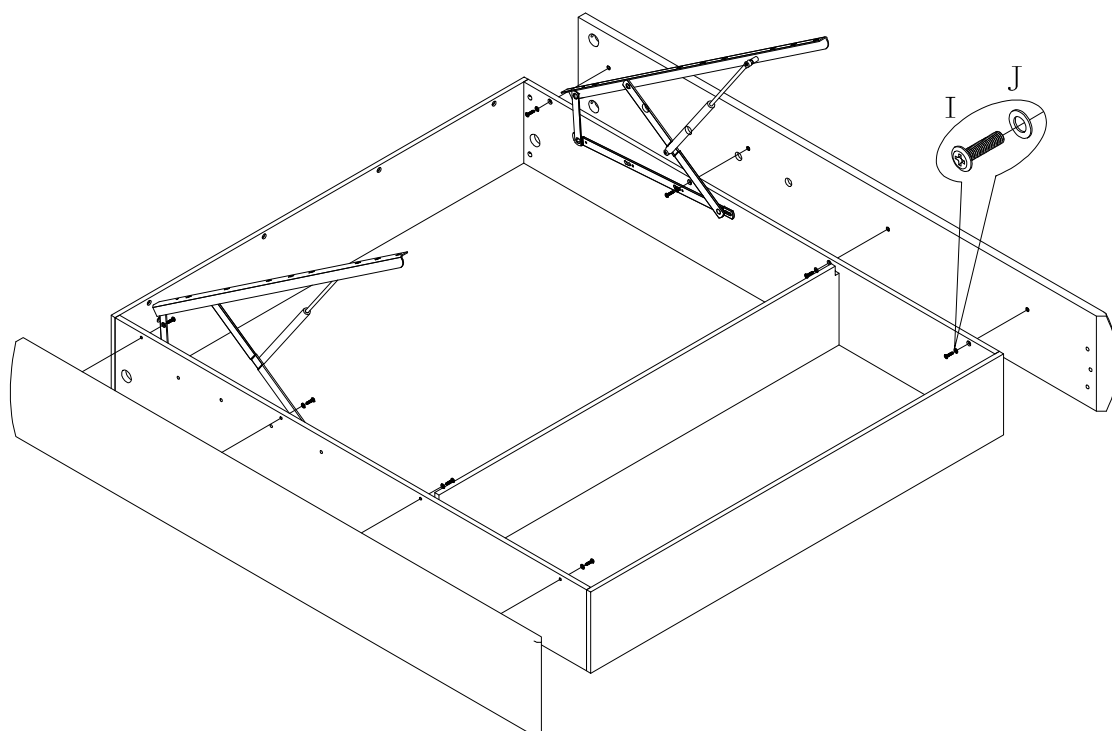


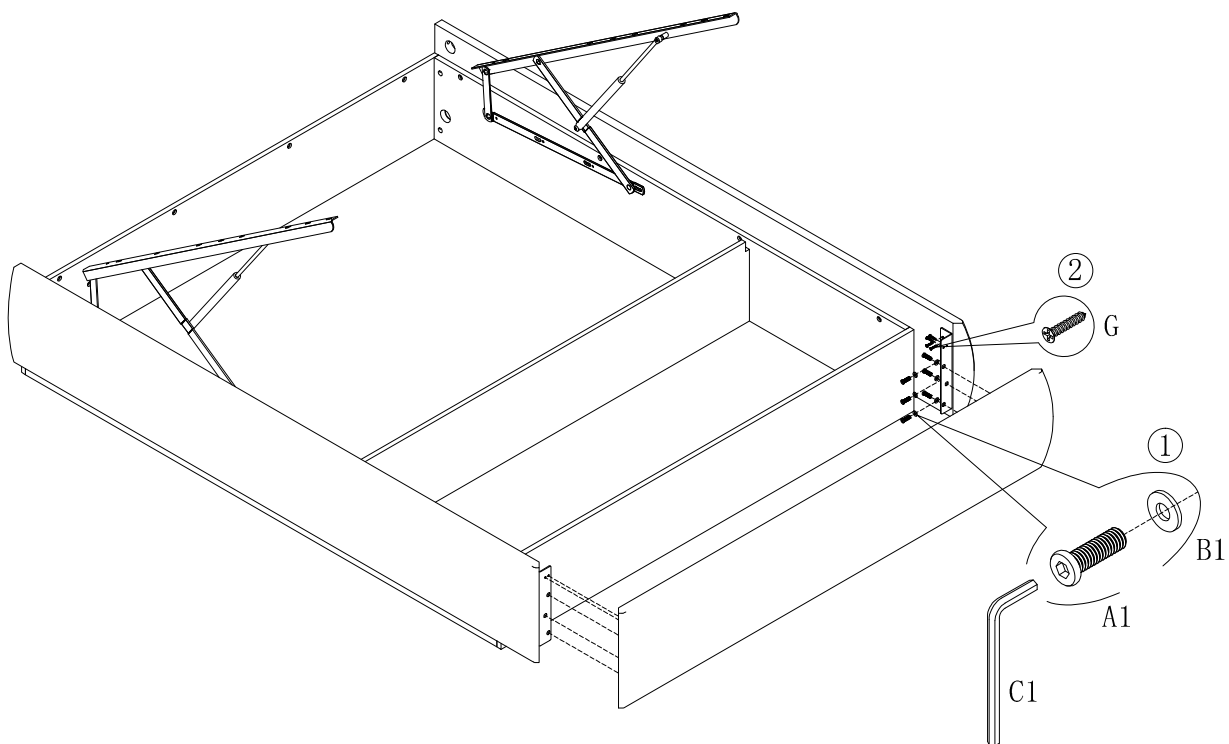

5


6

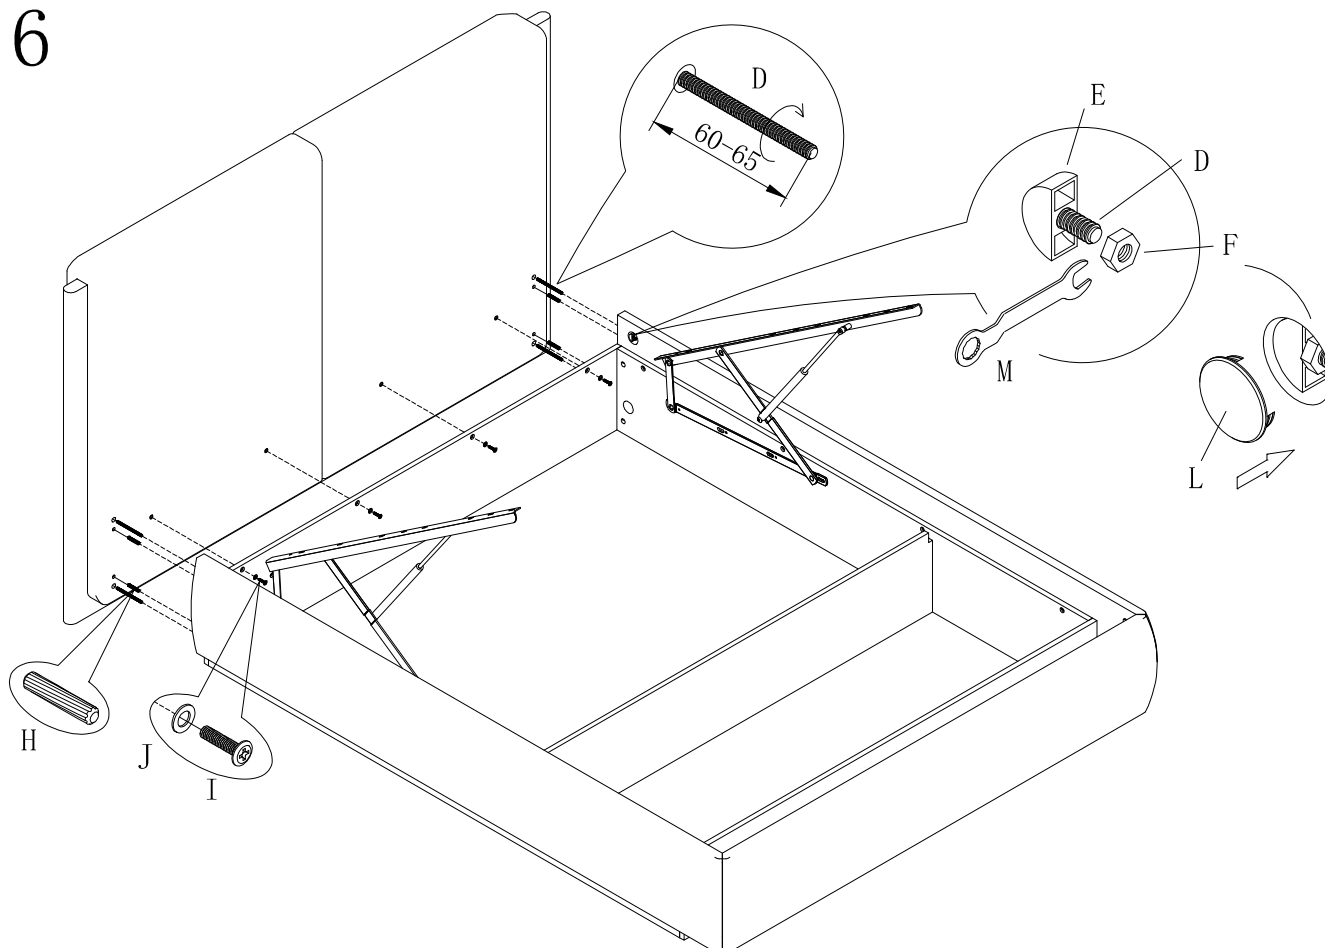


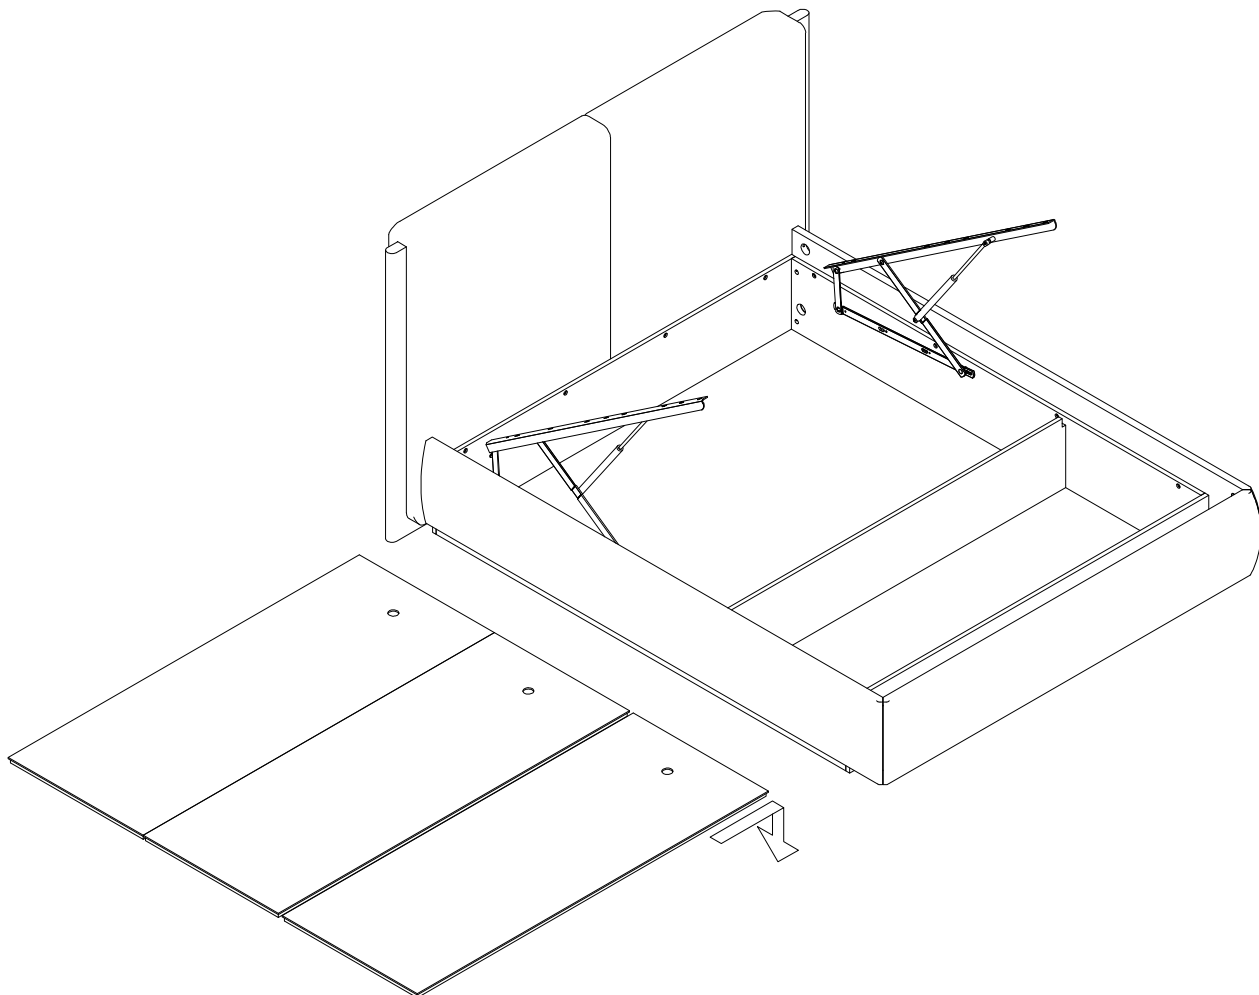

7


8

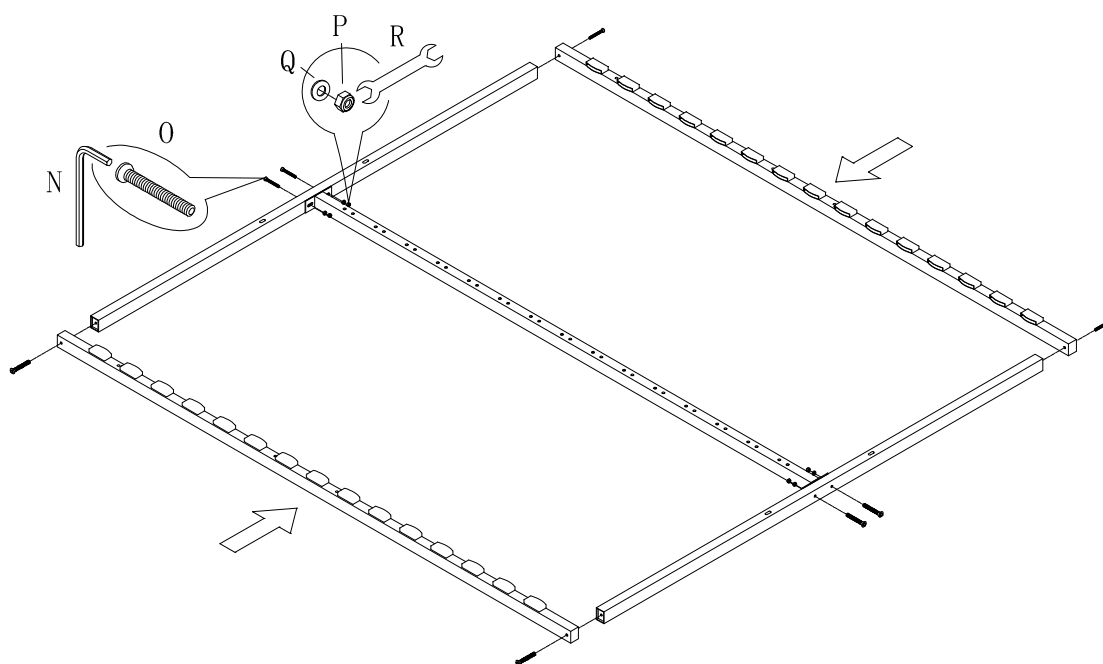


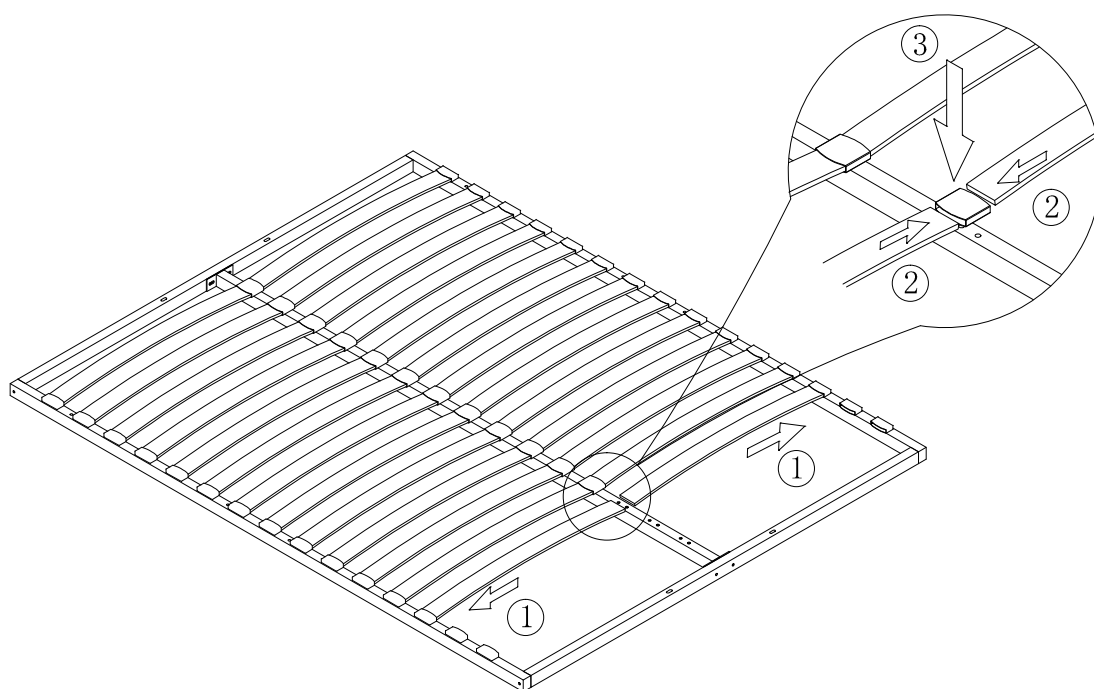

9


10

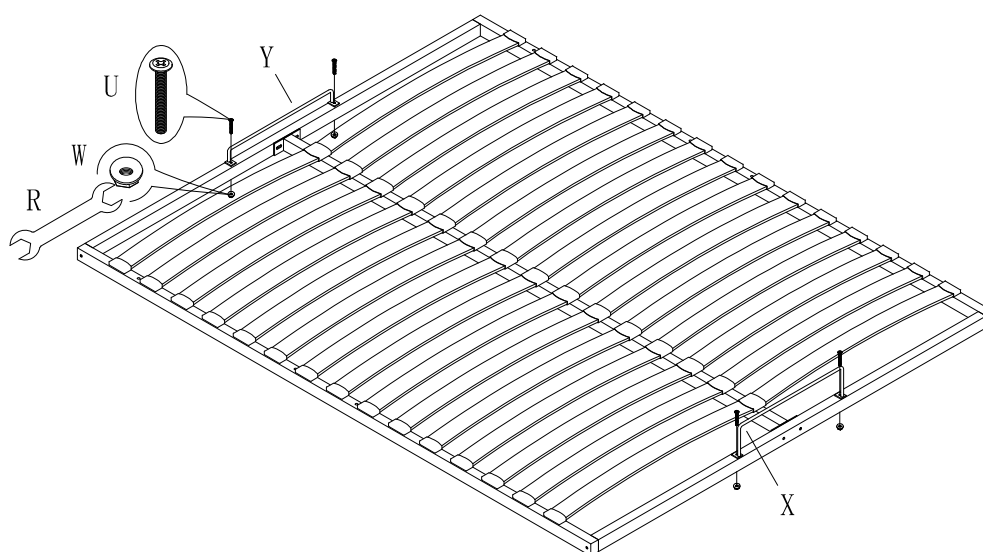

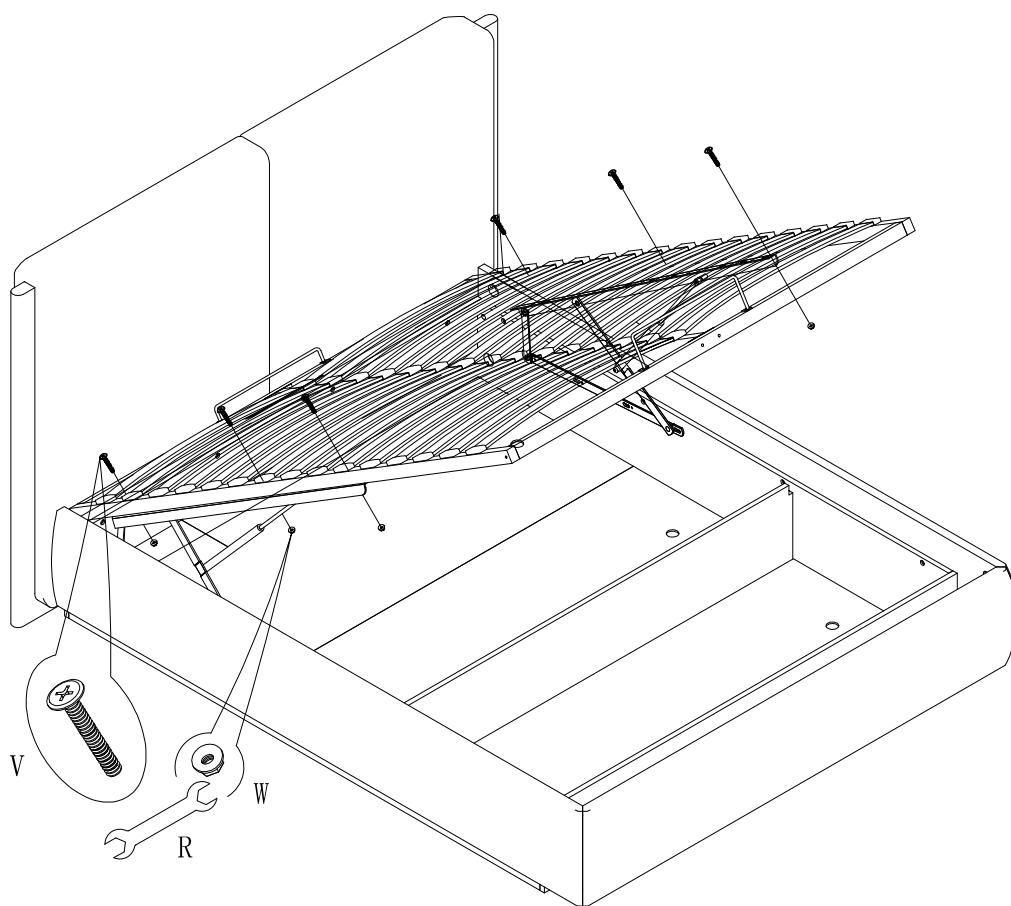

11

Attention:

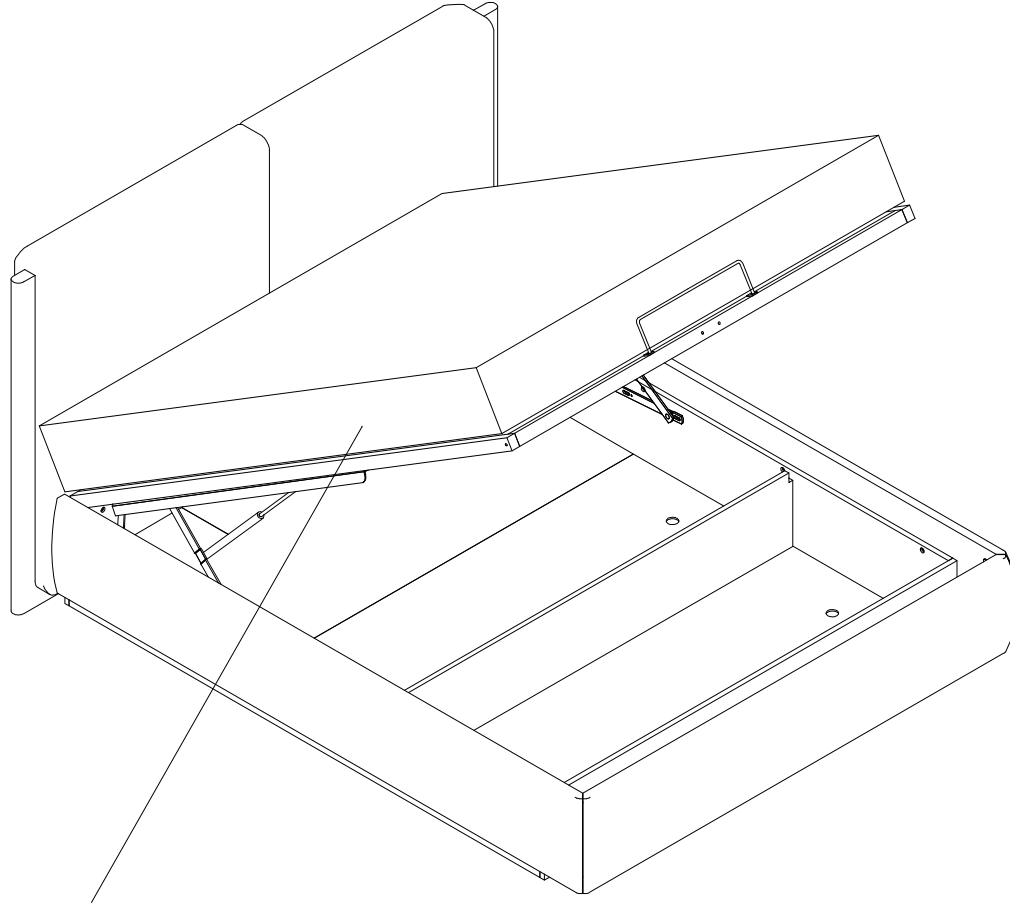

Mattress must be put on bedstead before pulling down!!