

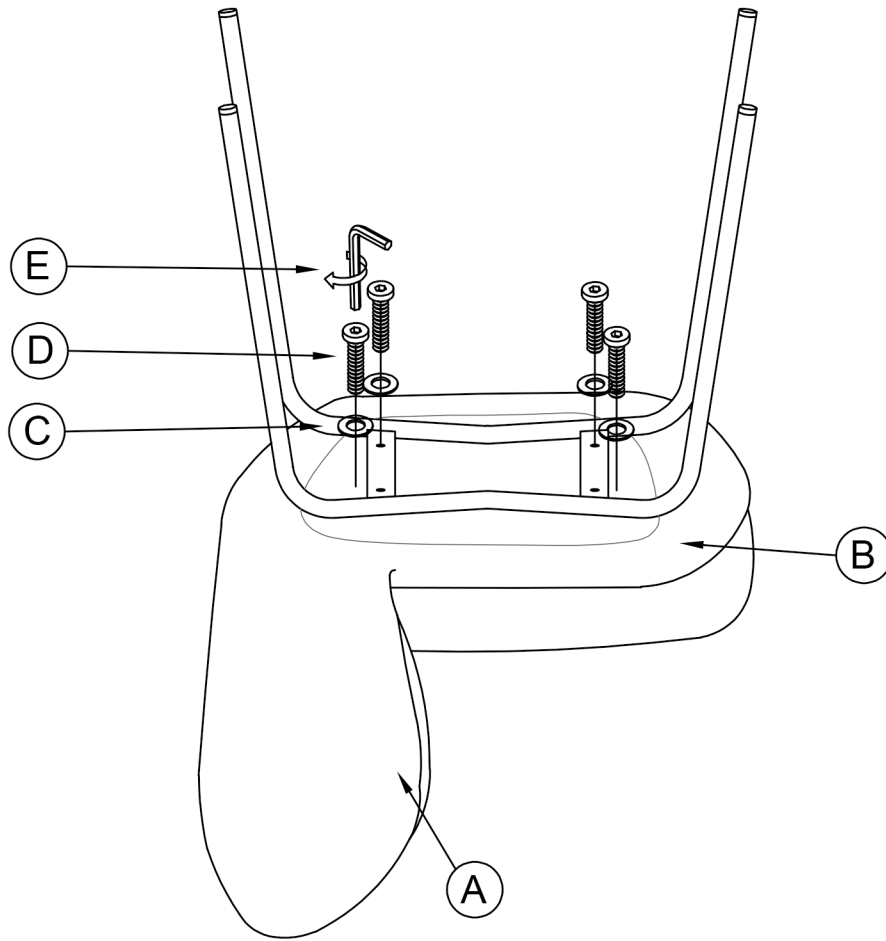



Step 1

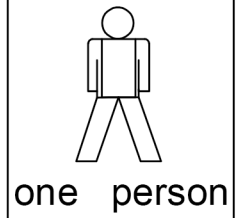

Step 2

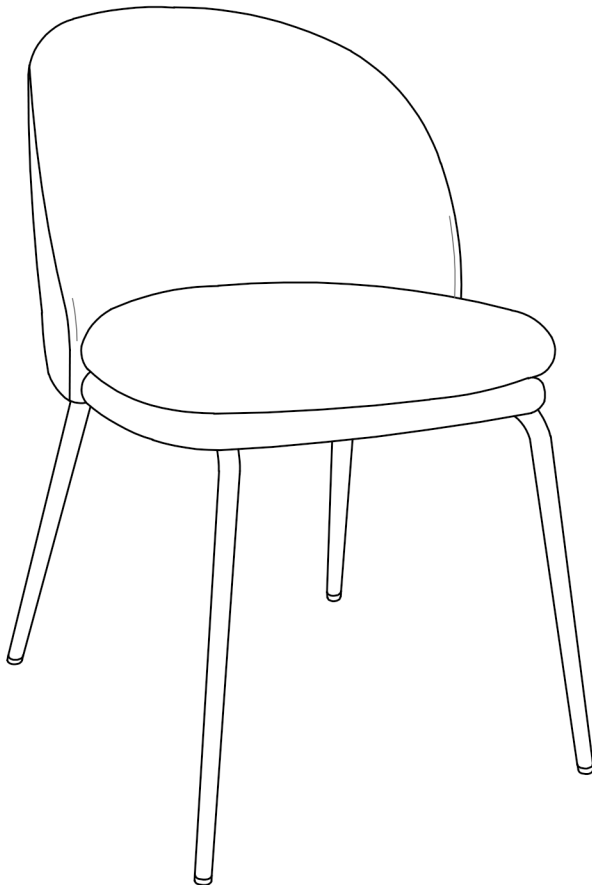

Assembly Instruction K910-2

NO:	Fittings	Qty:
A		1PCS
B		1PCS
C	Ø16xØ6 	4PCS
D	M6xL30 	4PCS
E	4mm 	1PCS